



Assembly Instructions

Universal Tips

1




Tighten the welding terminal into the threaded lead connector, initially by hand.

2



Use a wrench or spanner to snug tighten. Ensure the Smartfuse welding terminal is connected to the red lead, and the standard welding terminal is connected to the black lead.

3

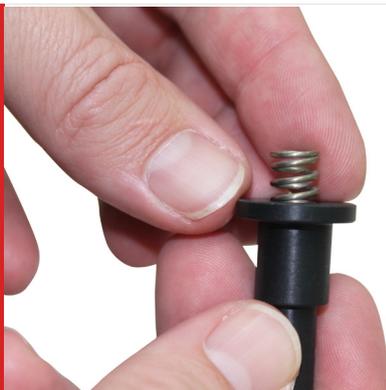

Place the spring into the sleeve.

4



Push the terminal through the spring and sleeve.